
FOOD SERVICE GASKETS

WWW.FOODSERVICEGASKETS.COM
(877) 434-1985



Chain / Cable
INSTALLATION DIRECTIONS

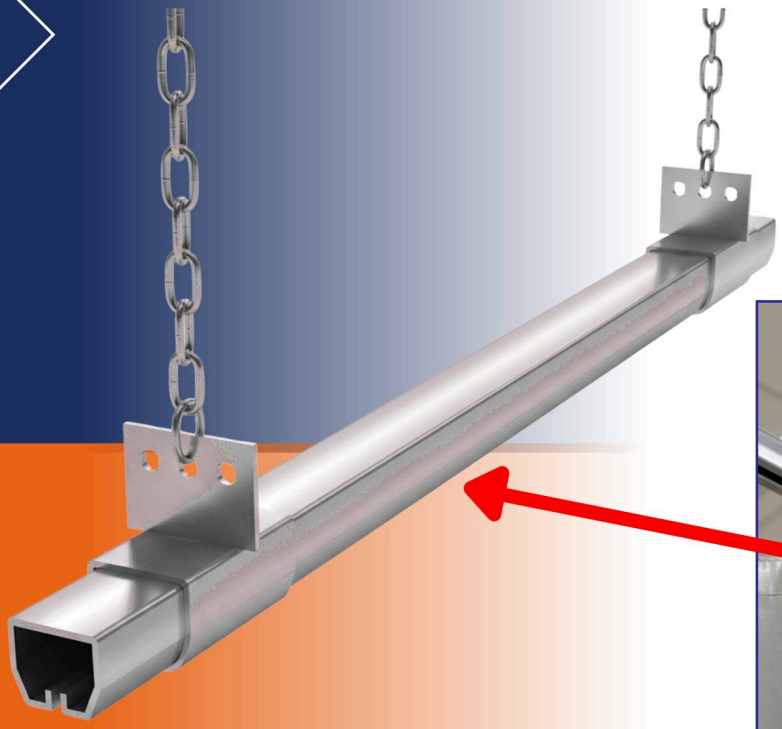

WARNING

Please ensure the product is acclimated to a minimum room temperature of 50° F (10° C) prior to unfolding. Failure to do so may result in "cold cracking." Please be advised that Food Service Gaskets does not provide warranty coverage for damage caused by improper thermal handling.

IMPORTANT

Ensure the ceiling height is at least 3 inches higher than the curtain height.

Please note that fasteners and chains for securing the hardware to your structure are not included.



STEP 1 -INVENTORY

Before installation, verify that you have all parts. Check your order confirmation and packing slips against the items received. Some orders ship in multiple packages or from different warehouses, so do not begin until everything arrives. If anything is missing, contact Food Service Gaskets through our general contact form or by calling us.

STEP 2 -LAYOUT THE TRACK (DON'T CONNECT YET)

Arrange the track and track supports on the floor without connecting them. This allows you to check the overall layout, determine if any track sections need to be shortened, and identify where the clamps will be installed.

SPACING THE SUPPORTS


Install track supports at intervals of approximately 5–6 feet. As you lay them out, identify where each support will be clamped to the structure above.

TIP

Supports can sometimes be spaced farther apart, but if the track shows any sagging or bending, decrease the spacing.


SPECIAL NOTES

1. The mounting beam must be level and parallel to the floor before installation.
2. You can mount the curtain parallel or perpendicular to the beam—the top clamp is designed to swivel for either orientation.

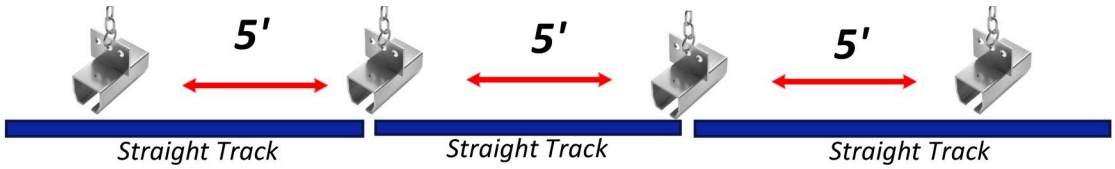

TIP

How you secure the top end of the support chain to the ceiling is at your discretion. For steel trusses or beams, you can use screw eye bolts with "S" hooks. When attaching to wood, lag screw eyes with "S" hooks are recommended.

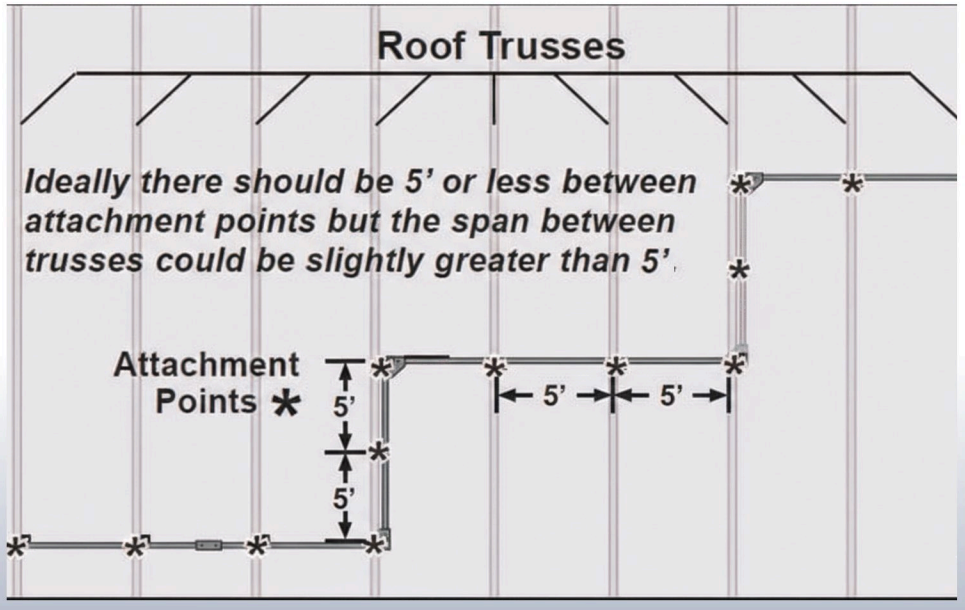

FOOD SERVICE GASKETS


STEP 3-CUT THE TRACK (IF NEEDED)

Lay the track on your floor according to your desired layout. At this stage, you may need to shorten the track. If so, trim the edges to achieve the correct length. For a few cuts, a hand saw works well; if many cuts are required, a Sawzall with a metal-cutting blade is recommended.

TIP

If you need to cut your track, make sure there are no burrs along the cut edges. Burrs can catch on the rollers and make it difficult to move your curtain. If any burrs are present, simply file them down.



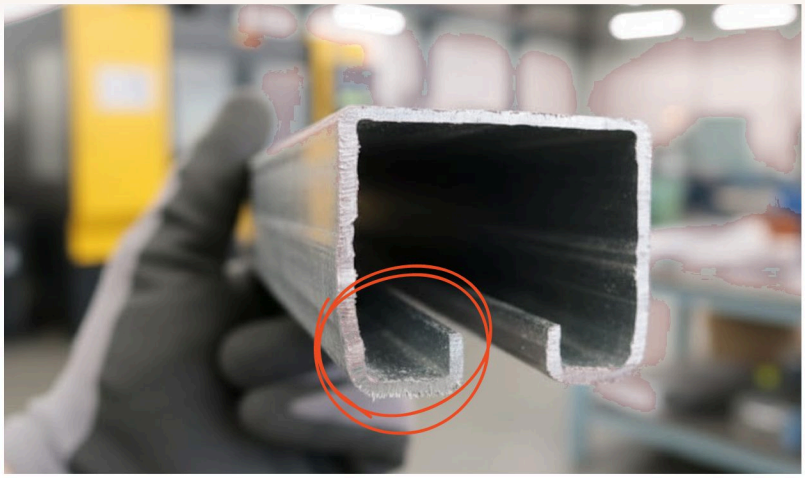

STEP 4-CUT YOUR CHAINS OR CABLES

Note: The design of your curtain assembly will depend on the placement of your roof trusses or beams. The method you use to attach the support chain to the trusses is at your discretion. Food Service Gaskets does not supply the fasteners, chains, or cables required to secure the hardware to your structure.

Step 1: Refer to the profile images below to determine the appropriate chain lengths. For sloped ceilings, note that some chain sections will be shorter or longer to keep the track level with the floor.

Step 2: Cut the chains to the required lengths and position them directly beneath their intended attachment points.


Step 3: Secure all chains to the structure. Once complete, you are ready to begin installing the track.

FOOD SERVICE GASKETS

Chain length will vary depending on how it is attached to the ceiling. Use the following formula:

Distance from Floor to Ceiling
(i.e. Bottom of Truss or Beam)
-Overall Assemble Height


= Length of Chain

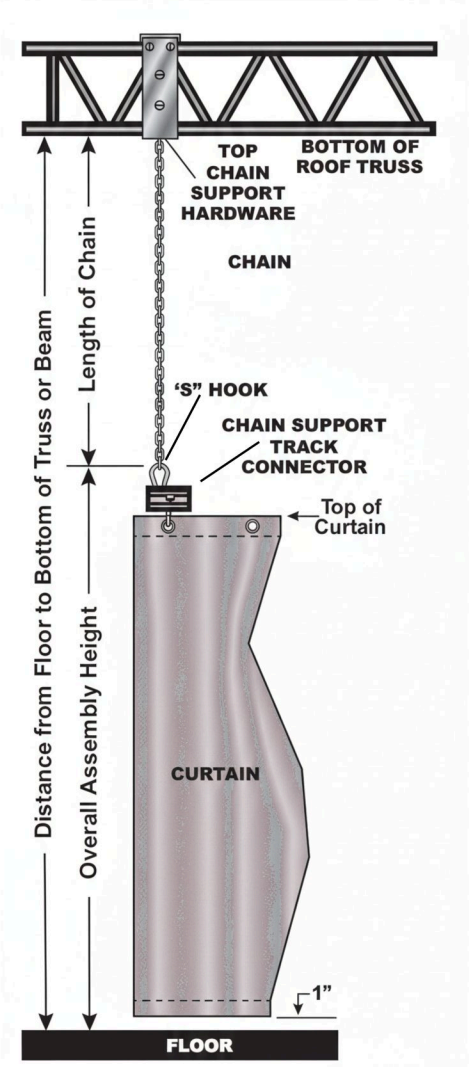

TIP *Leave extra chain or cable when cutting to fine-tune the height.*

Curtain Height
+ Hardware Height
(including "S" Hook)
+1"


= Overall Assembly Height

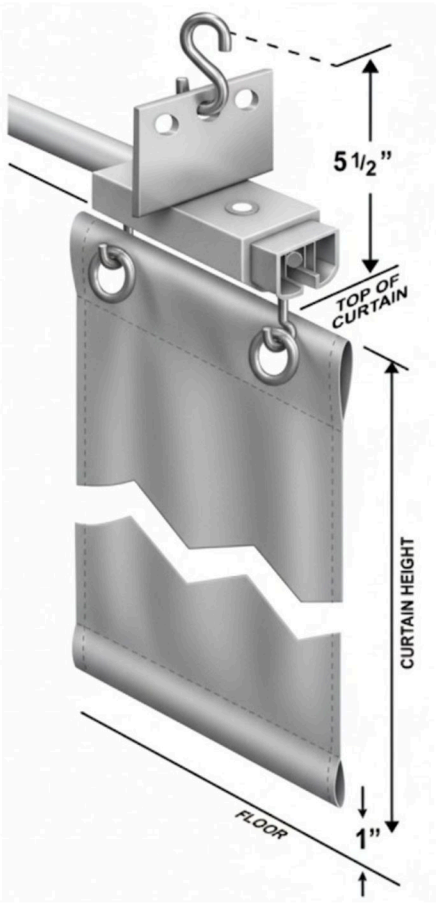


FOOD SERVICE GASKETS

STEP 5-ATTACH THE TRACK SUPPORTS TO THE CHAINS

Attach the track supports to the end of each chain or cable so they hang freely, as shown in the image below.

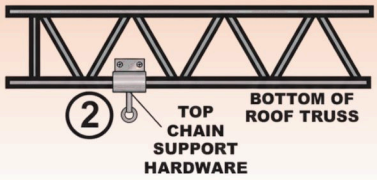

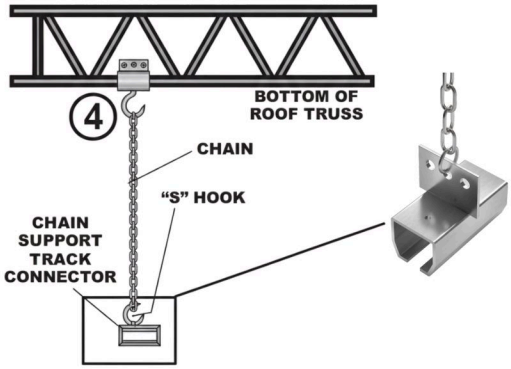


STEP 6-ATTACH THE TRACKS TO THE SUPPORTS

Next, attach the straight track sections to the hanging splice connectors. Start from one side and work your way across, connecting each track section one at a time.




TIP

When inserting the track into the splices, it can be helpful to lightly clamp a pair of vice grips onto the track approximately 4 inches from the end. This slightly narrows the track, making it easier to insert into the splice. Be careful not to tighten the vice grips too much, as this may deform the track.

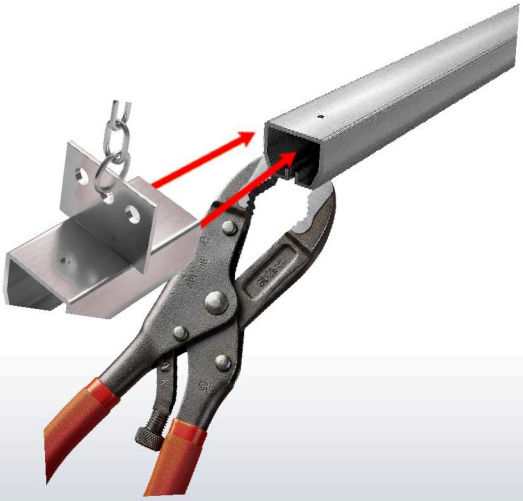

STEP 7-INSERT THE SET SCREWS

As you continue connecting the tracks with the track supports, insert the set screws. Loosely thread two Allen screws into each splice connector, turning them approximately one and a half rotations.

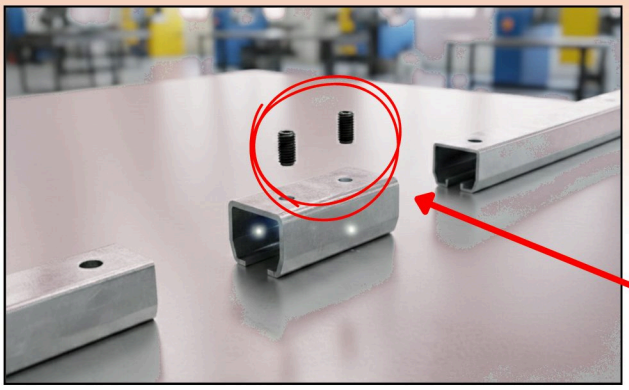


TIP

Do not overtighten the set screws, as this can deform the track and cause the roller hooks to bind.


STEP 8 -ATTACH END STOP

Install a single end stop on one side of the track. Only one end stop is attached at this stage, as the roller hooks will be added next.

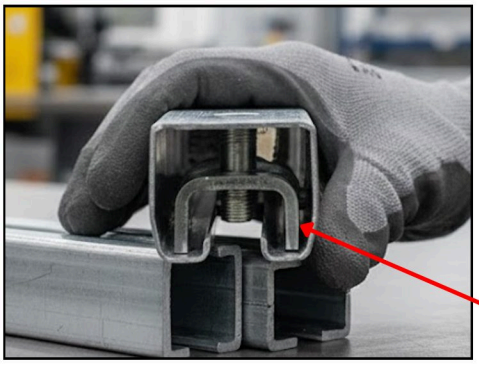

STEP 9-INSERT THE ROLLER HOOKS

Insert the roller hooks and slide them into the track. You may have some extra roller hooks, which can be kept as spares. Next, install the opposite end stop to prevent the rollers from coming out of the track.

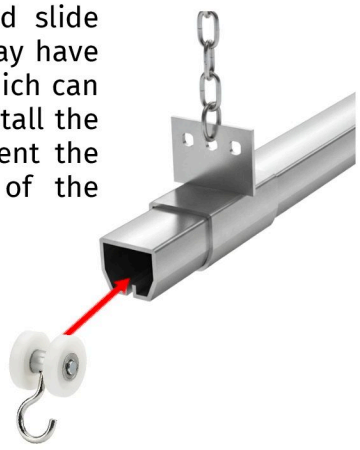

STEP 10-HANG THE CURTAIN

Hang the curtain onto the roller hooks, ensuring that each grommet is securely attached to a roller hook.

Note: If your curtain is taller than 15 feet, have an assistant help support the curtain during installation. Do not allow the curtain to hang from a single roller hook, as the weight may pull the grommet out.

Congratulations! Your curtain is now ready for use.



FOOD SERVICE GASKETS