
FOOD SERVICE GASKETS

WWW.FOODSERVICEGASKETS.COM
(877) 434-1985

Strip Door Stand Off Mount

INSTALLATION DIRECTIONS

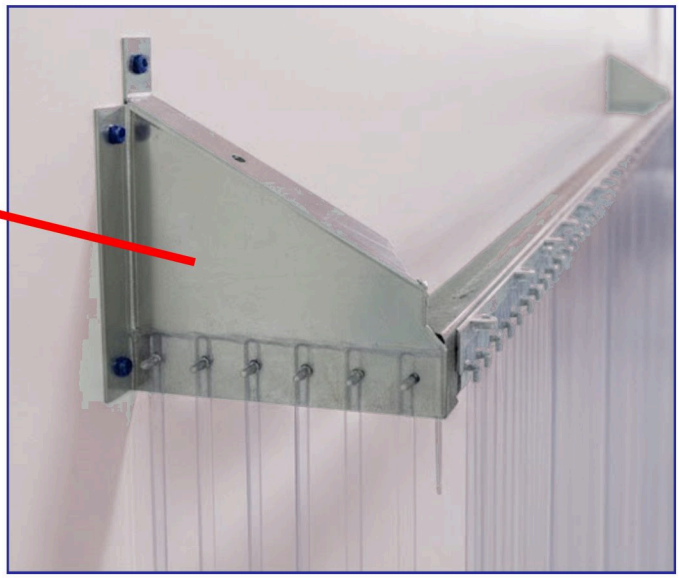



WARNING

Please ensure the product is acclimated to a minimum room temperature of 50°F (10°C) prior to unfolding. Failure to do so may result in "cold cracking." Please be advised that Food Service Gaskets does not provide warranty coverage for damage caused by improper thermal handling.

IMPORTANT

Consult a licensed structural engineer to specify proper mounting anchors. Anchors must support the overhead door brackets, PVC Strip Door Kit, and traffic-induced loads.

STEP 1 -INVENTORY



Begin by unpacking and inspecting all components to verify that your Overhead Door Extension Kit is complete. Each kit should include the following items:

- (2) Wall brackets (right and left) with (12) 1" bolts and nuts for attaching the side strips
- (1) Crossbeam with (2) 4" bolts and nuts for securing the crossbeam to the wall brackets
- Strip door mounting hardware sufficient to span the length of the crossbeam, along with self-tapping screws for each mounting hole

Note:

- For wall extensions of 6", 8", 10", or 12", only the components listed above are provided.
- For wall extensions of 14", 16", or 18", the kit also includes an OHD Bracket Extender and (4) additional ¾" bolts and nuts for attaching the extender to the wall bracket.

STEP 2 -CHOOSE THE OFFSET AND BOLT THE CROSSBEAM IN PLACE

Determine the desired crossbeam extension from the wall. Locate the corresponding hole in the wall bracket (or in the extender for 14", 16", or 18" extensions) and secure the crossbeam using the two 4" bolts and nuts provided.

STEP 3 -STRIP DOOR MOUNTING ALIGNMENT

Secure the strip door mounting hardware to the crossbeam, keeping it flush and in the same plane.

STEP 4 -ALIGNING THE EXTENSION KIT UNDER THE DOOR OPENING

Position the OHD Door Extension Kit directly beneath the door opening where it will be installed. Ensure the kit spans the full length of the crossbeam from end to end.

STEP 5 -TEMPORARY INSTALLATION OF PVC STRIPS


Temporarily secure three PVC strips: one on each wall bracket and one at the center of the crossbeam.

STEP 6 -POSITIONING, LEVELING, AND MARKING MOUNTING HOLES

Position and level the hardware and PVC strips so that their bottoms are approximately ½" above the floor. Mark all eight mounting holes—four on each wall bracket.

STEP 7 -DRILLING MOUNTING BRACKET HOLES

Lower the hardware and drill all pre-marked holes, four on each mounting bracket.

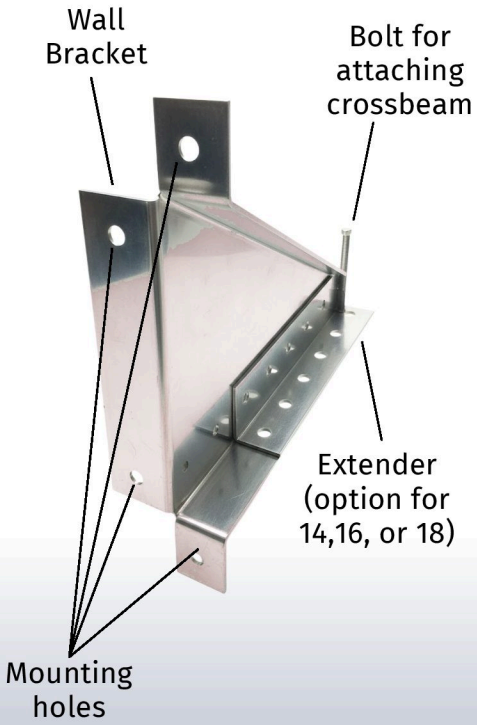

FOOD SERVICE GASKETS

STEP 8 -DRILLING HOLES FOR MOUNTING ANCHORS

Drill each mounting hole carefully, using a diameter appropriate for the selected anchor.

STEP 9 -REMOVING PVC STRIPS

Detach each PVC strip from the wall brackets and crossbeam.

STEP 10 -MOUNTING BRACKETS AND ATTACHING CROSSBEAM

Secure both mounting brackets to the mounting surface using the strongest and most reliable method available, following the Important Note at the beginning of this document. Once the brackets are firmly mounted, attach the crossbeam to them using the supplied 4” bolts.

STEP 11 -OVERHEAD BRACKET INSTALLATION COMPLETE

This completes the installation of the overhead door brackets. For the next steps on installing the PVC strips, please refer to the PVC strip door mounting system instructions included in the kit.